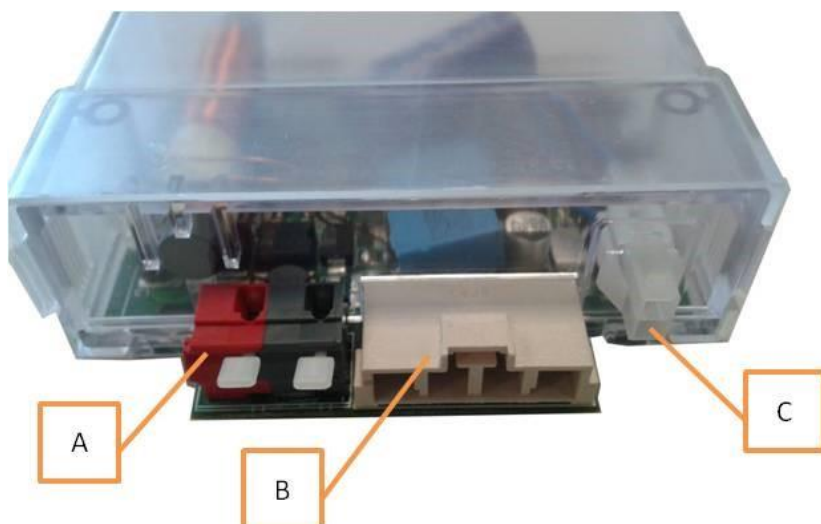
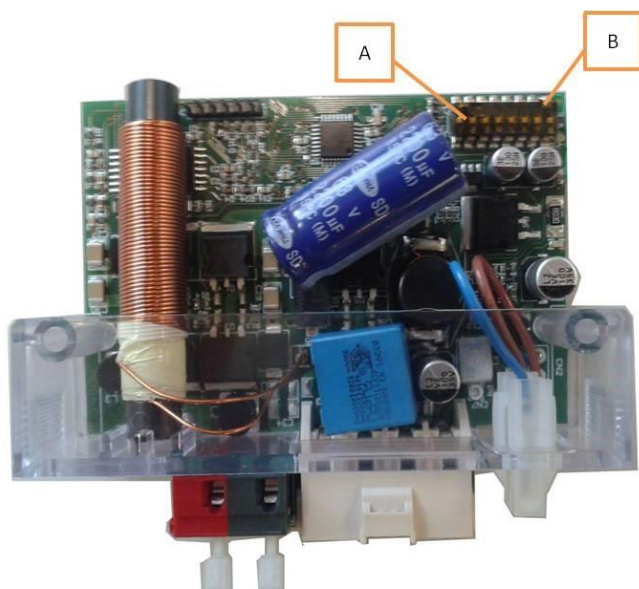


TX-S2 Sender (Transmitter) indstillinger

26-11-2021

Rev. 31-07-
2019**1. Forbindelser**

- A – Kantledning forbindelser
- B – Strøm forbindelse
- C – Strøm forbindelse

2. Indstillinger

- A - Dip-switch 1
- B - Dip-switch 8

		Dip-switch							
Set-up	Value	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Transmission channel	A	OFF	OFF						
	B	ON	OFF						
	C	OFF	ON						
	D	ON	ON						
Transmission power	24V			OFF					
	48V			ON					
Transmission frequency	7kHz				OFF				
	8kHz				ON				
Signal transmission	OFF					OFF			
	ON					ON			
Air Marker	ON						OFF		
	OFF						ON		
Transmission level	S- 25%							OFF	OFF
	M - 50%							ON	OFF
	L - 75%							OFF	ON
	XL - 100%							ON	ON

3. LED betydning

- Blinker RØD med 2Hz - signal sendes med 24V
- Blinker RØD med 4Hz - signal sendes med 48V
- Blinker RØD med 1Hz - signal sendes ikke, da robotten lader sit batteri
- Konstant RØD - signal sendes ikke da kantledning er ikke tilsluttet eller er i stykker.

